



- 1. Headlamps-2. Batteries-3. Alternator-4. Sending Unit - Water Temp.-5. Horn-6. Sending Unit - Oil Pressure-7. Relay - Battery Charge-8. Voltage Regulator-9. Fusebox-10. Thermostat-11. Starter-12. Voltage Regulator Fuse-13. Sending Unit - Fuel Gauge-14. Battery Charge Indicator-15. Indicator
  - 16. Fuel/Water Temp. Gauge-17. Indicator
  - 18. Oil Pressure-19. Switch - Starter/Thermostat-20. Switch - Safety Starting-21. Switch - Lock-22. Switch - Horn-23. Taillamp-24. Rear Floodlamp-25. Taillamp-26. Flashing Unit-27. Warning Light
  - 28. Turn Signal Switch
- COLOR CODE:**
- A - Light blue
  - B - Black
  - M - Brown
  - AM - Light blue-Black
  - GN - Yellow-Black
  - G - White
  - R - Red
  - HM - Grey-Black
  - HN - Grey-Black
  - HR - Grey-Red
  - HR - Grey-Red
  - VM - Green-Black
  - V - Yellow
  - S - Pink
  - M - Grey
  - V - Green
  - VM - Green-Black
  - L - Blue
  - Z - Violet
- Broken line equipped with turn signals; solid line warning lights only.

Wiring Diagram